

# Hitachi® Hydraulic Backhoe

Component identification EX1800™ | EX1900™ | EX3500/3600™ | EX5500/5600™ | EX8000™

## Pins and bushings



- |                                 |                               |
|---------------------------------|-------------------------------|
| <b>A</b> Link & bucket          | <b>G</b> Boom & arm           |
| <b>B</b> Arm & bucket           | <b>H</b> Arm & arm cylinder   |
| <b>C</b> Arm & link             | <b>I</b> Boom & boom cylinder |
| <b>D</b> Link & bucket cylinder | <b>J</b> Boom & arm cylinder  |
| <b>E</b> Frame & boom cylinder  | <b>K</b> Mainframe & boom     |
| <b>F</b> Arm & bucket cylinder  |                               |

## Undercarriage components

- |  |   |
|--|---|
| <b>L</b> <br>Idler         | <b>M</b> <br>Drive tumbler |
| <b>N</b> <br>Upper roller | <b>O</b> <br>Lower roller  |
| <b>P</b> <br>Track shoe   | <b>Q</b> <br>Drive shaft  |

