

# Hitachi® Hydraulic Shovel

Component identification EX1800™ | EX1900™ | EX3500/3600™ | EX5500/5600™ | EX8000™

## Pins and bushings



- |                                       |                                 |
|---------------------------------------|---------------------------------|
| <b>A</b> Bucket & bucket cylinder     | <b>H</b> Arm & level cylinder   |
| <b>B</b> Arm & bucket                 | <b>I</b> Boom & bucket cylinder |
| <b>C</b> Front & rear bucket          | <b>J</b> Boom & arm             |
| <b>D</b> Front bucket & dump cylinder | <b>K</b> Boom & boom cylinder   |
| <b>E</b> Rear bucket & dump cylinder  | <b>L</b> Boom & level cylinder  |
| <b>F</b> Mainframe & boom cylinder    | <b>M</b> Boom & arm cylinder    |
| <b>G</b> Arm & arm cylinder           | <b>N</b> Mainframe & boom       |

## Undercarriage components

- |  |   |
|--|---|
| <b>Q</b> <br>Idler         | <b>P</b> <br>Drive tumbler |
| <b>Q</b> <br>Upper roller | <b>R</b> <br>Lower roller  |
| <b>S</b> <br>Track shoe   | <b>T</b> <br>Drive shaft  |

