


Liebherr® Hydraulic Shovel

Component identification R994™ | R994B™ | R9350™ | R996™ | R996B™ | R9800™

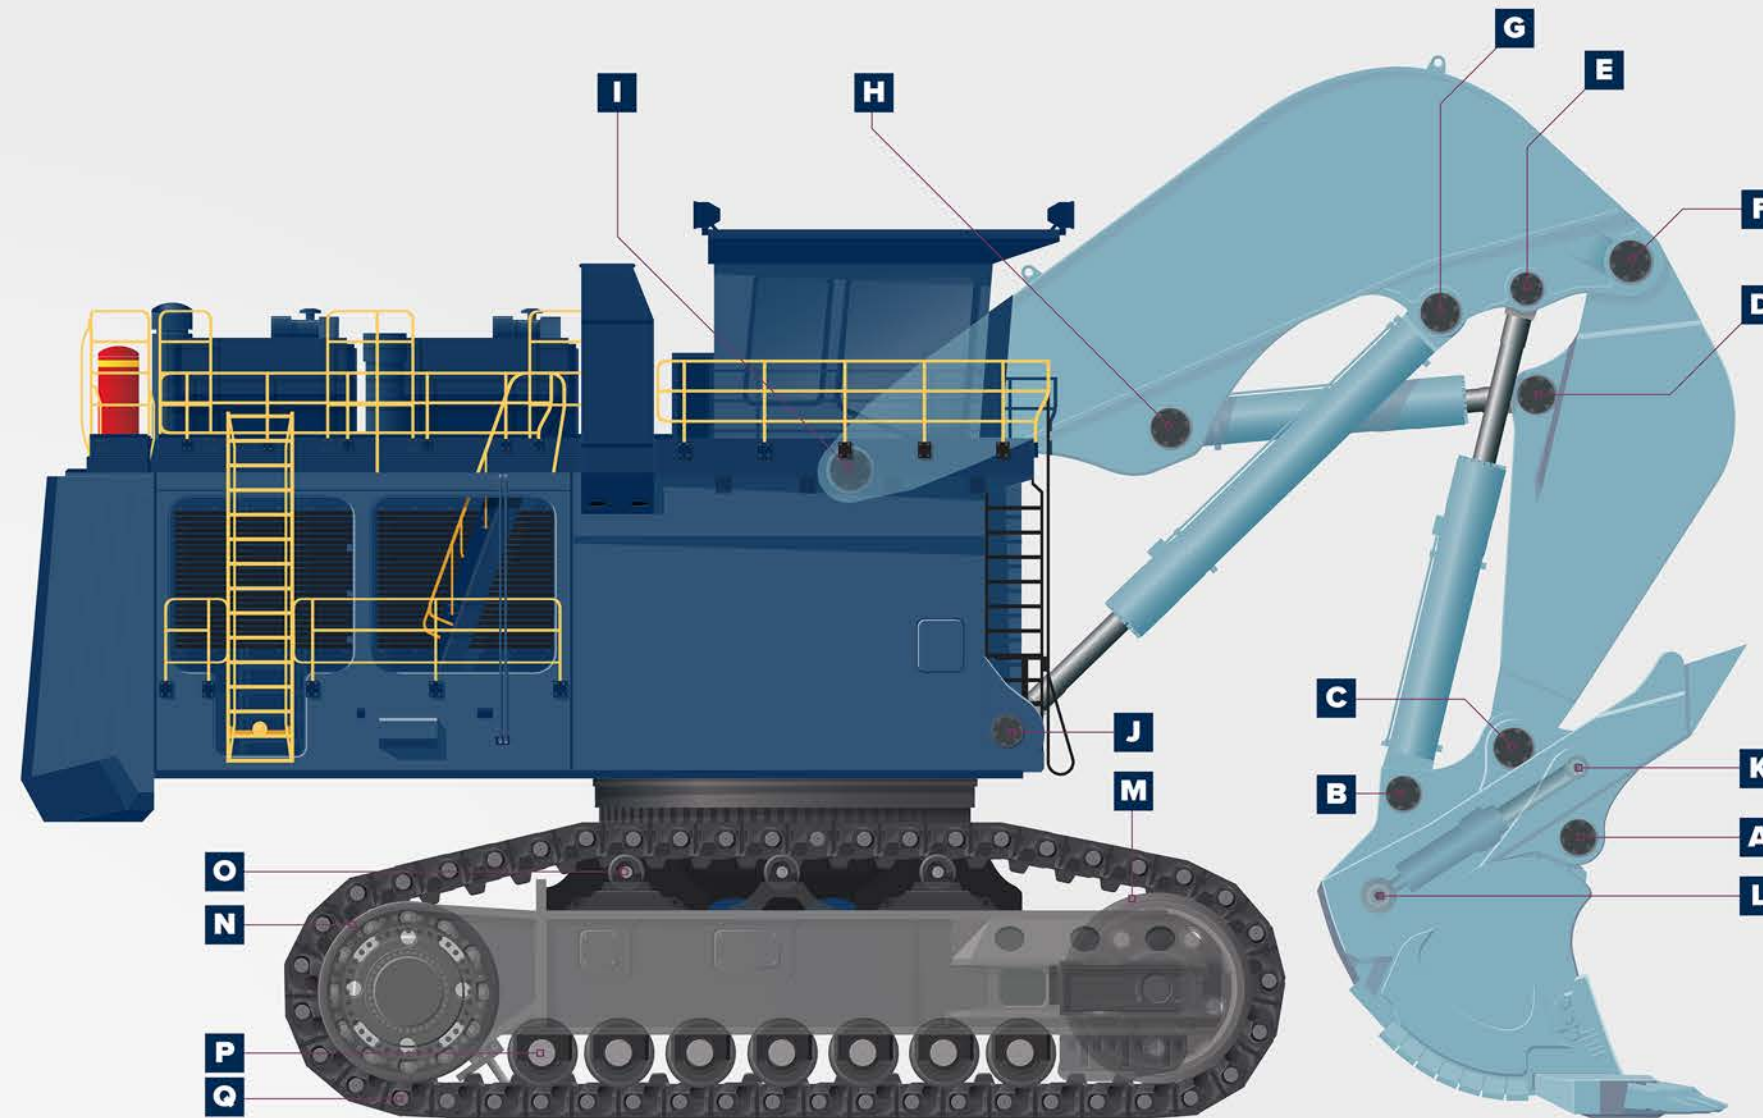

Pins and bushings

- | | |
|---|--|
| A Back wall and bottom bucket | G Boom and hoist cylinder |
| B Back wall and bucket tilt cylinder | H Boom and crowd cylinder |
| C Stick and back wall | I Boom and frame |
| D Stick and crowd cylinder | J Hoist cylinder and frame |
| E Boom and bucket tilt cylinder | K Dump cylinder and bottom bucket |
| F Boom and shovel stick | L Dump cylinder and back wall |

Undercarriage components



FLSmith Inc. - Pekin Operations
1 Excel Way
Pekin, IL 61554 USA

24/7 Hotline +1 309 202 8300

FLSmith A/S
Vigerslev Allé 77
2500 Valby
Denmark

Tel. +45 36 18 10 00
Fax +45 36 30 18 20
info@flsmith.com

www.flsmith.com